



Keurig K40 Handle Replacement

This repair guide will replace the handle on a Keurig K40.

Written By: Andrew Bornemann



INTRODUCTION

This repair guide will demonstrate a way to remove and replace the handle on a Keurig K40.



TOOLS:

- [T15 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Handle



- Unscrew one of the 2mm screws on the handle using a T15 screw head. Keep a firm grip on the device so it does not shift out of place.

Step 2



- Flip the Keurig over and unscrew the other 2mm screw using the same screw head. Keep a firm grip on the device to prevent it from shifting or falling.

Step 3



- Remove the lever by pulling it away from the Keurig.
- Replace a new handle by putting the Keurig back together the same way it was taken apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 11:02:08 PM.